


No	Bahco ref	Description	Q
1	BCL33IW101	Front Cover Ass'y	1
2	BCL33IW102	Rubber Washer	1
3	BCL33IW103	Washer	1
4	BCL33IW104	Thrust Bearing	1
5	BCL33IW105	Washer	1
6	BCL33IW106	Front Impact Ass'y 1/2"	1
7	BCL33IW107	Rear Impact Ass'y	1
8	BCL33IW108	Bearing Fixity	1
9	BCL33IW109	Rubber Washer	1
10	BCL33IW110	Planetary Gears Ass'y	1
11	BCL33IW111	Ring Gear	1
12	BCL33IW112	Washer	1
13	BCL33IW113	Screw+Spring Washer	2
14	BCL33IW114	Gear Case	1
15	BCL33IW115	O-Ring	1
16	BCL33IW116	Pad	1
17	BCL33IW117	Motor Ass'y	1
17-1	BCL33IW117-1	Carbon Brush	2
17-2	BCL33IW117-2	Carbon Brush Cover	2
18	BCL33IW118	Forward/Reverse Rod	1
19	BCL33IW119	Main Switch	1
20	BCL33IW120	Heat Shrinkage Tube	1
21	BCL33IW121	PCB Ass'y	1
21-1	BCL33IW121-1	Battery Connector	1
22	BCL33IW122	VR PCB Ass'y	1
23	BCL33IW123	Housing Back Cover Ass'y	1
24	BCL33IW124	Ø2x4l Screw	1
25	BCL33IW125	Pad	1
26	BCL33IW126	Thermal Protection	1
27	BCL33IW127	Heat Shrinkage Tube	1
28	BCL33IW128	TP2.0x4l Screw	2
29	BCL33IW129	Fuel Gauge Cover	1
30	BCL33IW130	Ferrite Core	1
31	BCL33IW131	Housing-L&R	1
32	BCL33IW132	TP3.5x15l Screw	10
33	BCL33IW133	TP4x25l Screw	4
34	BCL33IW134	Belt (Optional)	-
35	BCL33B1	Battery Pack 18V 2Ah	-
35	BCL33B3	Battery Pack 18V 5Ah	-
36	BCL33C1	Charger 18V	-
36	BCL33C2	Quick Charger 18V	-
37	BCL31C101	Power Cord	-

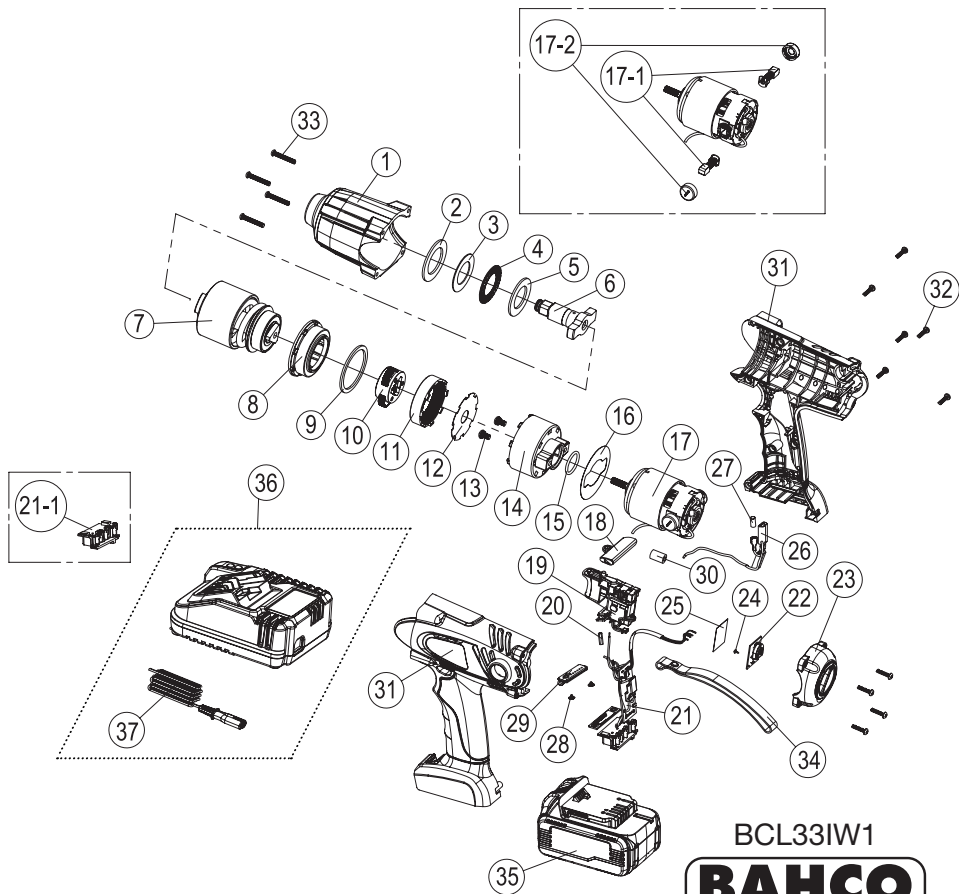

BCL33IW1



WWW.SNAEUROPE.COM