


LT-100NV

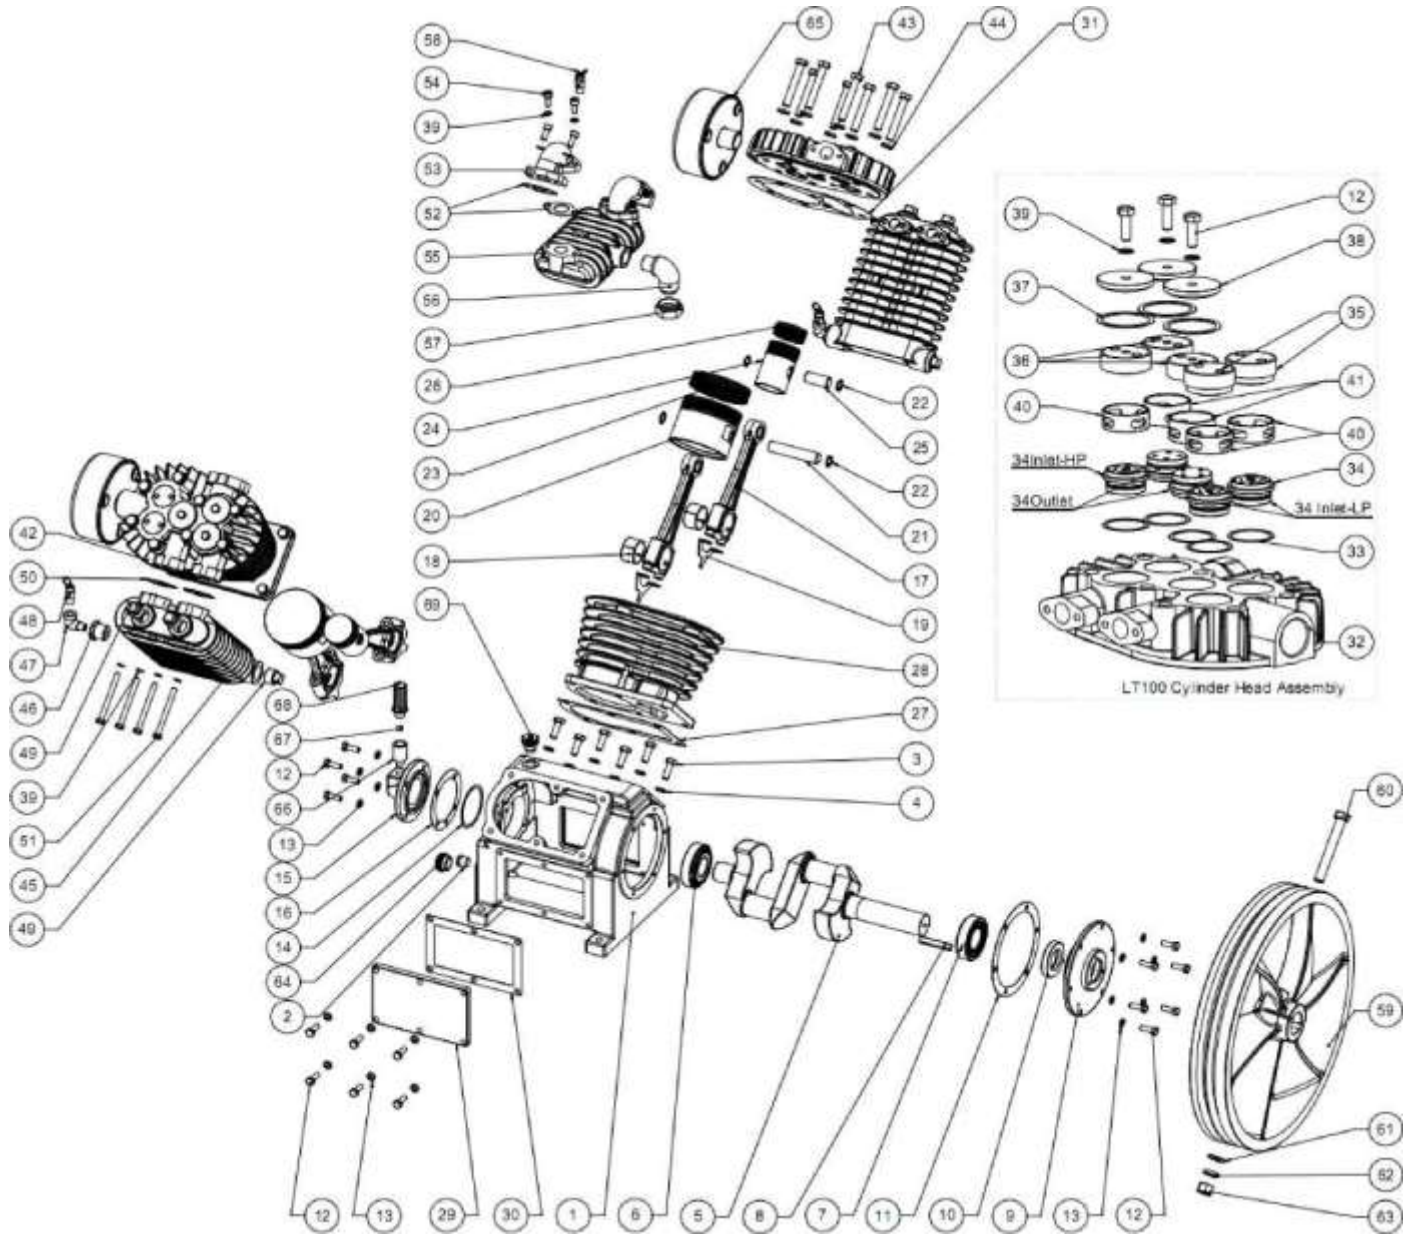



LT-100NV

No	Qty	Code	Name
1	1	21111025	Crankcase LT-100NV
2	1	21169003	Oil Draining Plug Z3/8" LB-50-2, LB-75-2, LT-100NV
3	12	11131008	Screw H M10-30 LT-100NV
4	12	11123004	Spring Washer W10 LB-50-2, LB-75-2, LT-100NV
5	1	21131009	Crankshaft LT-100NV
6	1	21134008	Ball bearing 7307E LT-100NV
7	1	21134009	Ball bearing 7508E LT-100NV
8	1	21136003	Flat Key 10x60 LT-100NV
9	1	21113006	Bearing seat LT-100NV
10	1	21161006	Oil seal D40x65x12 LT-100NV
11	1	21152006	Gasket Bearing seat LT-100NV
12	28	11131004	Screw H M8-25,8.8 LB-30-2
13	22	11123003	Spring Washer W8 LB-30-2
14	1	11125001	Adjustement Ring Ø80 Copper LT-100NV
15	1	21114005	Small back cover LT-100NV
16	1	21157003	Connection pan gasket LT-100NV
17	4	21132010	Rod D19-D43.5-178, LT100NV
18	8	21135001	Bush D40-D43.5-24 LT-100NV
19	4	21162003	Oil Splasher LT-100NV
20	2	21141005	Piston D105 LT-100NV
21	2	21143006	Piston pin D19-95 LT-100NV
22	8	21144004	Inside Circlip 19x1 LT-100NV
23	2	21145005	Piston Ring Set D105 LT-100NV
24	2	21142001	Piston D55 HP LT-100NV
25	2	21143005	Piston pin D19-45 LT-100NV
26	2	21145006	Piston Ring Set D55 LT-100NV
27	2	21153004	Gasket Bottom Cylinder D105-D55 LT-100NV
28	2	21121006	Cylinder D105-D55 M12 LT-100NV
29	2	21114001	Side Cover LT-100NV
30	2	21157001	Gasket LT-100NV Side cover
31	2	21151006	Gasket D105-D55 M12, Top Cylinder LT-100NV
32	1	21122006	Cylinder head left M12 Cast Iron LT-100NV
33	10	11122004	Washer D35-D41-0.5, Copper LT-100NV
34	10	21124012	Valve Set LT-100NV
35	4	21125001	Cap M45x2, LT-100NV High Pressure
36	6	21125002	Cap M45x2, LT-100NV, Low Pressure
37	6	21157006	Gasket Valve Cover, LT-100NV
38	6	21125005	Cover Valve, D51,D8 LT-100NV
39	22	11122001	Washer D8, Copper LB-30-2
40	6	21125004	Ring D41-37-16, LT-100NV, Inlet cap
41	4	21125003	Ring Ø41-37-16, LT-100NV, Outlet cap
42	1	21122005	Cylinder Head Right LT-100NV M12 Cast Iron
43	16	11131009	Screw H M12-80 LT-100NV
44	16	11123005	Spring Washer W12 LT-100NV
45	2	21172003	Inter cooler LT-100NV
46	2	21178003	Inside-outside fixation Z1/4" LT-100NV
47	2	21173003	Elbow Z1/4"-Z1/4" LT-100NV
48	2	23114003	Safety valve 1/4"-5 bar LT-100NV
49	6	21167003	Oil filling plug Z3/4" LT-100NV
50	4	21157007	Gasket LT-100NV Inter Cooler
51	8	11131007	Screw H M8-90 LT-100NV
52	4	21157009	Gasket LT-100NV Cooler elbow
53	2	21173006	Elbow LT-100NV
54	8	11132003	Screw C HC M8-25,6.8 LT-100NV
55	1	21172005	Cooler LT-100NV Iron
56	1	21173004	Exhaust elbow Z3/4"-M33x1.5 LT-100NV
57	1	11113002	Exhaust Nut M33x1.5 LT-100NV

58	1	23114001 23121001	Safety valve 1/4"-14 bar LT-100NV
59	1	21212006	Pulley LT-100NV
60	1	11131010	Screw H M16-120 LT-100NV
61	1	11121004	Washer D16-t=3 LT-100NV
62	1	11123006	Spring Washer W16 LT-100NV
63	1	11111004	Nut H M16 LT-100NV
64	1	21164004	Oil Leveler G3/4, Fluminium, LT-100NV
65	2	21175005	Air Filter Set LT-100NV
66	1	21178001	Oil breath fixation LB-40-3, LT-100NV
67	1	21178004	Ball D9.5 LT-100NV
68	1	21166001	Oil Breath Pipe M16x1,5 LB-40-3
69	1	21167004	Oil Filling Plug M20x2.5, LT-100NV
		21175009	Air filter cartridge LT-100NV

